

Operating Instructions

Model No. **KX-TCD410E**

Contents

Preparation

Before Initial Use	2
Important Information	3
Setting up	4

Cordless Telephone

Using the Telephone	9
Making Calls	10
Caller ID	11
Answering Calls	13
Phonebook	14
Handset Settings	18
Base Unit Settings	24
Initial Settings	26
Multi-unit User Operation	28
Intercom	32

Useful Information

Before Requesting Help	33
Technical Information	35
Index	36
Guarantee	37



Caller ID Compatible

PLEASE READ BEFORE USE AND SAVE.

Charge the battery for about 7 hours before initial use.

Before Initial Use

Thank you for purchasing your new Panasonic digital cordless telephone.

- Order accessory items for all Communications Products with ease and confidence either by telephoning our Customer Care Centre on:
08700 100 076 Monday - Friday 9:00am - 5:30pm
- Or go on line through our Internet Accessory ordering application at shop@Panasonic <http://www.panasonic.co.uk>
- Most major credit and debit cards accepted.
- All enquires transactions and distribution facilities are provided directly by Panasonic UK Ltd.
- It couldn't be simpler!

Dear purchaser,


You have acquired a KX-TCD410E, which is a product made in regard with the European Standards for Cordless Telephones (DECT). DECT technology is characterized by high-security protection against interceptions as well as high-quality digital transmission. This telephone was designed for a wide range of applications. For example, this telephone can be used within a network of base units and handsets, constituting a telephone system which:

- operates up to 6 handsets at one base unit
- allows an intercom between 2 handsets.
- allows the operation of a handset at up to 4 base units, expanding the communication radio area.

Caller ID Service, where available, is a telephone company service. After subscribing to Caller ID, this phone will display the caller's phone number.

Accessories (included)

☐ AC Adaptor
PQLV19E

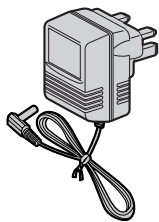


☐ Telephone Line
Cord
(for UK)



☐ Rechargeable
Batteries
(AAA size)
HHR-4EPT/BA2
(P03P)



☐ Battery Cover
PQKK10134Z4

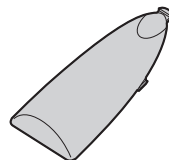

Additional accessories are available for purchase. Contact your Panasonic Customer Care Helpline for further details. U.K. 08700 100 076 R.O.I. 01289 8333

Only use the power supply included with the product.

Do not connect the AC Adaptor to any AC outlet other than the standard AC220-240V.

The apparatus is approved for use with PQLV19E power supply.

This apparatus is unable to make emergency telephone calls under the following conditions:

- The portable handset batteries need recharging, or have failed.
- During a mains power failure.
- When the Key Lock is set to ON.
- When the unit is in Direct Call mode.

Do not open the base unit or handset (other than to change the batteries).

This apparatus should not be used near emergency/intensive care medical equipment and should not be used by people with pacemakers.

Care should be taken that objects do not fall onto, and liquids are not spilled into the unit. Do not subject this unit to excessive smoke, dust, mechanical vibration or shock.

Environment

Do not use this unit near water.

This unit should be kept away from heat sources such as radiators, cookers, etc. It should also not be placed in rooms where the temperature is less than 5°C or greater than 40°C.

The AC Adaptor is used as the main disconnect device, ensure that the AC outlet is located / installed near the unit and is accessible.

WARNING:

TO PREVENT THE RISK OF ELECTRICAL SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR ANY OTHER TYPE OF MOISTURE.

Battery Caution

Use only specified batteries.

Only use rechargeable batteries.

Do not mix old and new batteries.

Do not dispose of batteries in a fire, they may explode.

Check local waste management codes for special disposal instructions.

Do not open or mutilate the batteries.

Released electrolyte is corrosive and may cause burns or injury to the eyes or skin.

The electrolyte may be toxic if swallowed.

Exercise care in handling the batteries in order not to short the batteries with conductive materials such as rings, bracelets and keys.

The batteries and/or conductor may overheat and cause burns.

Charge the batteries provided in accordance with the information given in this operating guide.

Location

- For maximum distance noise-free operation, place your base unit:
 - Away from electrical appliances such as TV, radio, personal computer or another phone.
 - In a convenient high and central location.

Safety Caution


The ringer tone is reproduced through the earpiece. To avoid damage to hearing, first answer the call, then hold the phone to the ear.

Setting up


◆◆ Connection

Do not connect the telephone line cord to the phone socket **4** until the handset is fully charged.

Plug in the AC adaptor and the telephone line cord in order **1, 2, 3**.
(Switch on AC mains outlet.)

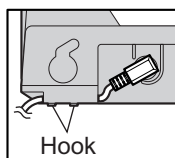

Fasten the AC adaptor cord to prevent it from being disconnected.

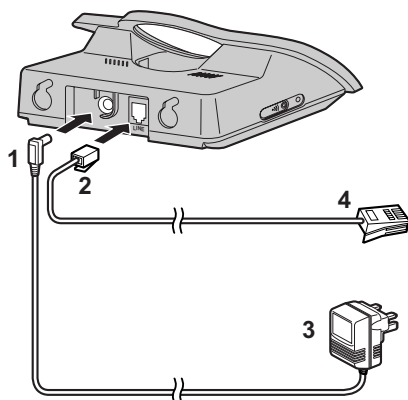


The AC adaptor must remain connected at all times (It is normal for the adaptor to feel warm during use).

- Never install telephone wiring during a lightning storm.

◆◆ Battery Installation

Please ensure the batteries are inserted as shown. \ominus part should be inserted first. Close the cover as indicated by the arrow.

- When you replace the batteries, \oplus part should be removed first.

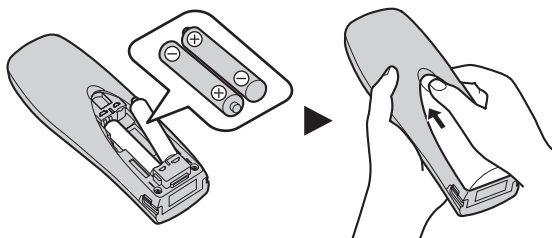


To replace the battery:

Press the notch on the cover firmly and slide it as indicated by the arrow. Replace 2 batteries and close the cover then charge the handset for about 7 hours.



◆◆ Battery Charge


At the time of shipment, the batteries are not charged. To charge, place the handset on the base unit. **Please charge the batteries for about 7 hours before initial use.** During charging, the battery icon is as shown below.

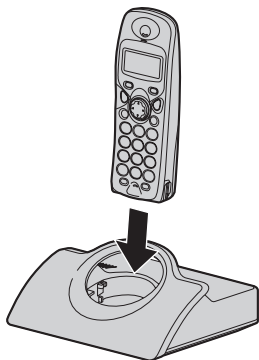

Fully charged



 During charging



Display icon	Battery strength
	High
	Medium
	Low
	Needs to be charged

The handset which power is off will be turned on automatically when it is placed on the base unit.

In normal use, the handset and the base unit should be powered on at all times.

◆◆ Battery Life

Battery life is dependent on use and conditions but in general when using fully charged Ni-MH batteries (700 mAh):

Talk time: 10hrs approx.

Standby time: 120hrs approx.

When using Ni-Cd batteries (250 mAh):

Talk time: 4hrs approx.

Standby time: 40hrs approx.

(Times indicated are for peak performance)



 


The batteries reach peak performance after several full charge/discharge cycles. The batteries cannot be overcharged unless they are repeatedly removed and replaced.

If battery life is shortened then please check that battery and charge terminals are clean.


For maximum battery life, it is recommended that the handset is not recharged until battery icon flashes

Setting up

◆◆ Symbols Used in This Operating Instructions

Symbol	Meaning
	To search the desired item, press UP or DOWN .
	To select the desired item, press RIGHT .
	To search and then to select the desired item, press UP or DOWN then RIGHT .
	To move the cursor to the right or to the left, press RIGHT or LEFT .
	To go to the next step.
" "	The words in " " indicate the words in display.

◆◆ Replacing the Batteries


If the  icon flashes after a few telephone calls even when the handset batteries have been fully charged, 2 batteries must be replaced.

Charge new batteries for approximately 7 hours before initial use.


(The telephone line cord must not be connected to the telephone socket at this time.)

When replacing the batteries, ensure that the correct battery type is selected.


Selecting the Battery Type

1 


Press
MENU.

2 


Search/Select
"SETTING HS".

3 


 
Search/Select
"OTHER OPT".

4 

Search/Select
"BATTERY TYPE".

5 


Search/Select
"NI - Cd" or "NI - MH".

- To exit the operation, press  any time.
- When Ni-Cd batteries are fitted with the "BATTERY TYPE" setting in "NI - MH",  icon will disappear and stop charging even if the handset is on the cradle.
- Do not use non-rechargeable batteries. If non-rechargeable batteries are fitted and start charging, it may cause the leakage of the battery electrolyte.

Please use only Panasonic P03P(Ni-MH) or P03H(Ni-Cd) batteries.


◆◆ Location of Controls

Handset

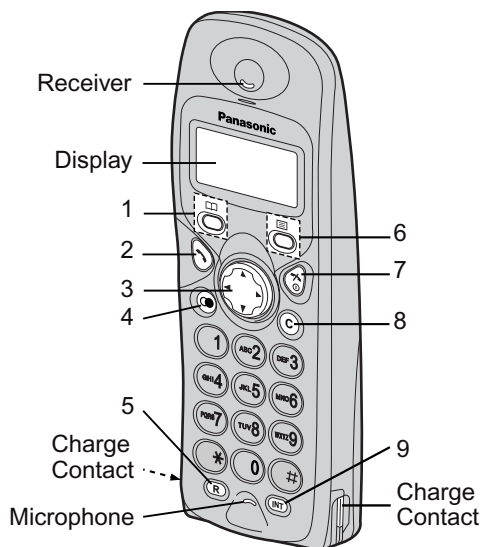

- 1 - **PHONEBOOK** Button
- 2 - **TALK** Button
- 3 - **Navigator** Key
- 4 - **REDIAL/PAUSE** Button
- 5 - **RECALL** Button
- 6 - **MENU/OK** Button
- 7 - **OFF/POWER** Button
- 8 - **CLEAR** Button
- 9 - **INTERCOM** Button

Base unit

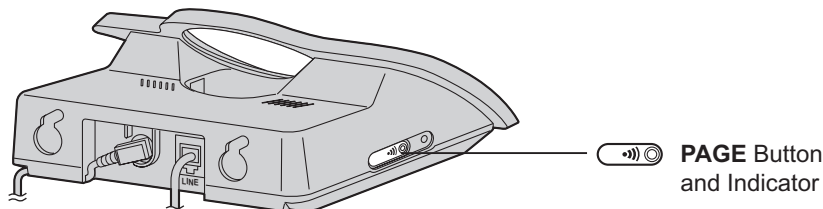

◆◆ Handset Display



- Within range of a base unit
- Out of range/No registration/
No power on base unit
- Paging or using the handset
- Making or answering calls
- Phonebook Mode
- In Setting Mode
- Battery strength is low.
- Battery strength is high.
- Call BAR ON (p.21)
- Direct Call ON (p.22)
- Key Lock ON (p.23)
- Ringer Volume OFF (p.19)
- Dialling Pause (p.23)

Setting up

◆◆ Wall Mounting

This unit can be mounted on a wall.

- Insert screws into the wall. The centre of the screw hole should be 8 cm horizontally apart.
- Connect the AC adaptor and the telephone line cord.
- Arrange the wires as shown, then mount the unit.

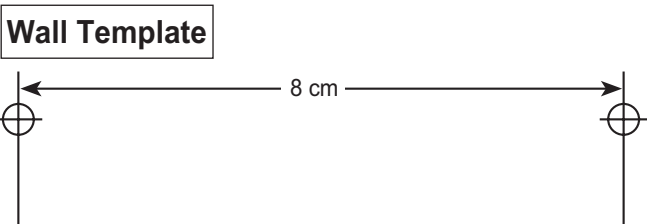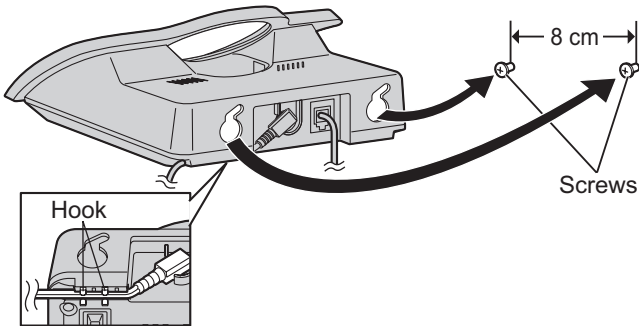

◆◆ Power On/Off

Power on



Press for more than 1 second. *1

Power off



Press for more than 2 second. *2

*1 When button is released, the display changes to the standby mode.

*2 The display goes blank.

◆◆ Making a Call

Pre-dialling

1 Phone Number *1

2



Press **TALK**.

Post-dialling

1



Press **TALK**.

2 Phone Number

*1 If you need correction, press **CLEAR**. Digit is cleared to the left, then enter numbers.

◆◆ Answering a Call

Terminating a Call



Press **TALK**. *1

(During a call) ➔



Press **OFF**.

- Each ringer will start ringing with lower volume then gradually increase the volume when receiving a call.

*1 You can also answer a call by pressing any dialling button, **INTERCOM**, **#**, or *****.

◆◆ Setting the Clock/Date

After a mains power failure the clock needs to be reset. Ensure that icon is not flashing.

1		2		➔ "INPUT CODE"	3		➔	Time Enter time. 4-digit (24 hour clock) *1
	Press MENU .		Search/Select "SETTING BS".					
4		5		➔ "INPUT CODE"	6		twice ➔	Date Enter day, month then year. *2
	Press OK .		Press RIGHT .					7 Press OK .

- To exit the operation, press any time.

*1 For example, to set 7:15, enter 0715.

*2 For example, to set the 16th of February, 2003, enter 160203.





Making Calls

◆◆ Redialling







The last 10 numbers dialled are stored in the redial list automatically.

Dialling with the Redial List





Dialling the Last Number Dialled


1 	2 	3 	1 	2 
Press REDIAL . ^{*1}	Search the desired dialled item.	Press TALK .	Press TALK .	Press REDIAL .

Editing the Dialled Number in the Redial List

1 	2 	3 	➔ The 1st digit of the desired dialled number blinks.		
Press REDIAL . ^{*1}	Search/Select the desired dialled item.	Search/Select "EDIT CALL NO".			
4 	5 	AND/OR	Number	6 	➔ If you need to store a name, go to Name on page 14 or press OK .
Move cursor.	Press CLEAR . ^{*2}		Edit the phone number. ^{*3}	Press TALK . OR Press OK 3 times to store the number.	

Clearing One/All Dialled Item(s) in the Redial List

1 	2 	3 	4 
Press REDIAL . ^{*1}	Search/Select the desired dialled item.	Search/Select "CLEAR" or "ALL CLEAR".	Search/Select "YES".

- To exit the operation, press  any time.

^{*1} If there is no item stored in the redial list, the display shows "NO ITEM".

^{*2} Digits are cleared to the left of the flashing digit.

^{*3} Digits are added to the left of the flashing digit. If you need to clear and/or add more than one number, repeat the steps from **4**.

◆◆ Caller ID Service

Caller ID is a service of your Network provider and will only operate if you have subscribed to this feature.

After subscribing to Caller ID, this phone will display the caller information.

If your unit is connected to a PBX or a telephone line that does not support this service, you will not be able to use it.

Caller ID does not display caller information while using the handset for an intercom call. However, the caller information will be stored to the Caller ID List.


Call Waiting: Call Waiting is a service of your Network provider and will only operate if you have subscribed to this service.

After subscription, your handset displays a second caller's phone number while talking and a Call Waiting tone is heard.

You can answer the second call, keeping the first call on hold.


Please consult your Network provider for details of this service.

◆◆ Caller ID Display

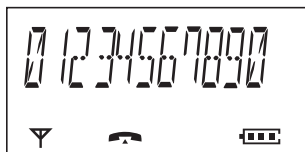

When receiving a call, the display shows its phone number.

For example, a caller whose phone number is 01234567890 has been received.

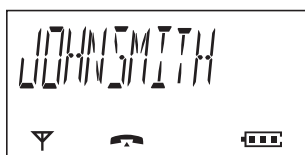


If you store a phone number with a name in the phonebook, the display shows caller's name when receiving a call.



If the caller has requested not to display his/ her information, the display shows "PRIVATE".



If the caller dialed from an area which does not provide Caller ID service, the display shows "OUT OF AREA".

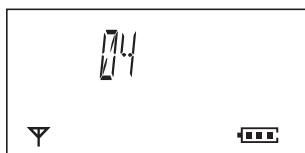

When new calls have been received, the display shows the number of calls.

For example, 4 new calls have been received.

Caller ID







◆◆ Caller ID List

Information up to 50 different callers is stored from the most recent call to the oldest call in the caller list. When the 51st call is received, the oldest caller information is cleared. If you receive a call from the same phone number you stored with a name in the phonebook, the display will show the caller's name.




Calling Back


1  Search the desired received item.*1	2  Press TALK .
---	---


Editing the Received Number in the Caller List

1  Search/Select the desired received item.*1	2  Search/Select "EDIT CALL NO".	➔ The 1st digit of the desired received number blinks.	3  Move cursor.	
4  Press CLEAR .*2	AND/OR	Number	5  Press TALK . OR  Press OK 3 times to store the number.	➔ If you need to store a name, go to Name on page 14 or press OK .

Clearing One/All Received Item(s) in the Caller List

1  Search/Select the desired received item.*1	2  Search/Select "CLEAR" or "ALL CLEAR".	3  Search/Select "YES".
---	--	---

- To exit the operation, press  any time.

*1 If there is no item stored in the caller list, the display shows "NO ITEM".  on the right edge of the display when searching the item in the caller list indicates that the item has been already shown previously.


*2 Digits are cleared to the left of the flashing digit.

*3 Digits are added to the left of the flashing digit. If you need to clear and/or add more than one number, repeat the steps from **3**.

◆◆ Auto Talk

If you set Auto Talk to on, you can answer the phone by lifting the handset off the base unit.

1 	2 	3 	4 	5 
Press MENU .	Search/Select "SETTING HS".	Search/Select "OTHER OPT".	Search/Select "AUTO TALK".	Search/Select "ON" or "OFF".

- To exit the operation, press  any time.

◆◆ Temporary Bell Off

When an external call is incoming, you can temporarily turn off the handset ringer. This function will not work when the handset is on the base unit or if an internal call is incoming.





Press and hold **DOWN** for over 1 second.

◆◆ Receiver Volume

 


During a call, press **UP** or **DOWN** to change the volume setting to LOW (0), MEDIUM (00), HIGH (000).

(During a call)  

Press **UP** or **DOWN**.

◆◆ Handset Locator/Paging

Using this feature, you can locate a misplaced handset by paging.





1 Press  on the base unit	2 All registered handsets ring for 1 minute.
<To stop paging>	
3 Press  on the base unit	OR  ^{*1} on one of the handsets.

*1 You can also stop paging by pressing any dialling buttons, **INTERCOM**, **#** or **✳**.

Phonebook

You can store up to 20 caller information in the phonebook. If you received a call from the same phone number you stored with a name in the phonebook, the display will show the caller's name.

◆◆ Storing a Caller Information


 








1 	2 	3 Phone Number	4 
Press MENU .	Select "NEW PHONE".	Enter phone number. (max. 24 digits) *1	Press OK .
5 Name	6 		
Enter name. (max. 9 characters)*1	Press OK . *2		

- To exit the operation, press  any time.

 *1 If you need correction, press **RIGHT** or **LEFT** to move cursor then clear character by pressing **CLEAR**, and/or enter characters. Characters are cleared or added to the left of the flashing character. To enter characters, see Character Selection below.

*2 To continue storing another caller information, repeat the steps from **3**.





Character Selection

Keys	Number of times key is pressed								Keys	Number of times key is pressed				
	1	2	3	4	5	6	7	8		1	2	3	4	5
 ①	#	[]	*	'	-	/	1		 ⑥	M	N	O	6	
 ②	A	B	C	2					 ⑦	P	Q	R	S	7
 ③	D	E	F	3					 ⑧	T	U	V	8	
 ④	G	H	I	4					 ⑨	W	X	Y	Z	9
 ⑤	J	K	L	5					 ⑩	Blank	0			




Character Table

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q	R	S	T	U	V	W	X	Y
a	b	c	d	e	f	g	h	i	j	k	l	m	n	o	p	q	r	s	t	u	v	w	x	y
z	1	2	3	4	5	6	7	8	9	*	0	#	-	/	[]	,								
7	1	2	3	4	5	6	7	8	9	*	0	#	-	/	[]	,								




Editing a Caller Information

1  Press PHONEBOOK . *1	2  Search/Select desired item.	3  Select "EDIT".	 The 1st digit of the desired phone number blinks.
---	---	--	---





<Phone Number>

4  Move cursor.	5  Press CLEAR . *2	AND/OR	Number	6  Press OK .
--	---	---------------	---------------	---

<Name>


7  Move cursor.	8  Press CLEAR . *2	AND/OR	Name	9  Press OK .
--	---	---------------	-------------	---

Clearing a Caller Information

1  Press PHONEBOOK . *1	2  Search/Select desired item.	3  Search/Select "CLEAR".	4  Search/Select "YES". *5
---	---	--	---

Dialling with the Phonebook

1  Press PHONEBOOK . *1	2  Search desired item.	3  Press TALK .
---	--	---

- To exit the operation, press  any time.

*1 If there is no item stored in the phonebook, the display shows "NO ITEM".

*2 Digits are cleared to the left of the flashing digit.




*3 Digits are added to the left of the flashing digit. If you need to clear or add more than one digit, repeat the steps from **4**.


*4 Characters are added to the left of the flashing character. If you need to clear or add more than one character, repeat the steps from **7**.

*5 To continue clearing another caller information, repeat the steps from **2**.

Phonebook

◆◆ Storing the Phone Number into the Phonebook When Pre-dialling







1 Phone Number *1	2  Press OK to store the number.	3  Press OK twice.	4 Name Enter name.*2
5  Press OK .			


• To exit the operation, press  any time.

*1 If you need correction, press **CLEAR**. Digit is cleared to the left, then enter numbers.

*2 To enter characters, see Character Selection on page 14.

◆◆ Storing the Number from the Redial/Caller List into the Phonebook

1	 Press REDIAL .*1	➔	 Search/Select the desired dialled number.
	OR  Search/Select the desired received number.*1		
2	 Search/Select "SAVE TEL NO".*2	3	 Press OK .
4	If you need to store a name, go to Name on page 14.		
	OR  Press OK .		

• To exit the operation, press  any time.






*1 If there is no item stored in the redial/caller list, the display shows "NO ITEM".

*2 If you need correction, press **RIGHT** or **LEFT** to move cursor then clear a digit by pressing **CLEAR**, and/or enter digits. Digits are cleared or added to the left of the flashing digit.


◆◆ Hot Key

You can assign the dialling buttons 1 through 9 as hot keys. You can choose 9 phone numbers from the phonebook.

Registering a Phone Number as a Hot Key


1  Press PHONEBOOK .*1	2  Search/Select desired item.	3  Search/Select "HOT KEY REG".	4  Search/Select desired dialling button number.*2
5  Search/Select "YES".			

Dialling with Hot Key

1 Press and hold the dialling button registered as a hot key.	2  Press TALK .
--	---

Clearing the Hot Key Registration

1 Press and hold the dialling button registered as a hot key.	2  Press RIGHT .	3  Select "CLEAR".	4  Search/Select "YES".*3
--	--	---	--

- To exit the operation, press  any time.

*1 If there is no item stored in the phonebook, the display shows "NO ITEM".

*2 The number is flashing if the dialling button is already assigned as a hot key.

*3 Phonebook registration will be remained even hot key registration is cleared.

Handset Settings




TIME ALARM : Time Alarm

Before programming, please follow steps 1 to 3.

You must set the clock before setting the time alarm.


- 1** 
Press **MENU**.
- 2**  
Search/Select
"SETTING HS".
- 3**  
Search/Select
"TIME ALARM".

Setting Alarm Time

- 4**  
Search/Select
"SET TIME".
- 5** **Time**
Enter time.
4-digit
(24 hour clock).
- 6** 
Press **OK**.
- 7**  
Search/Select
"OFF",
"ONCE" or
"REPEAT DAILY".

Setting Time Alarm On/Off

- 4**  
Search/Select
"SET ALARM".
- 5**  
Search/Select
"OFF",
"ONCE" or
"REPEAT DAILY".

- To exit the operation, press  any time.

To stop time alarm: Time alarm will sound for 3 minutes. When the alarm sounds, press any dialling buttons or key. Alarm stops and display returns to the standby mode.
If "ONCE" is selected, the setting is turned off. When in talk or intercom mode, the alarm will not sound until the call is ended.



RINGER OPT : Ringer Option

Before programming, please follow steps 1 to 3.

- 1**  Press **MENU**.
- 2**   Search/Select "SETTING HS".
- 3**   Search/Select "RINGER OPT".

Setting the Ringer Volume





The choices are 6 levels and off.


- 4**   Search/Select "RINGER VOL".
- 5**   Search/Select desired ringer volume.

- If "RINGER OFF" is selected,  is displayed.

Setting the Ringer Pattern for External Call/Internal Call/Paging/Alarm

There are 20 patterns available on each ringer.

- 4**   Search/Select "EXT RINGER", "INT RINGER", "PAGING" or "ALARM".
- 5**   Search/Select desired ringer pattern.*1

- To exit the operation, press  any time.
- Each ringer will start ringing with lower volume then gradually increase the volume when receiving a call.

*1 If you select one of the melody ringer patterns, it keeps ringing for 10 seconds even if a caller hangs up a call. Therefore, you may hear dial tone or no one there after you answer a call.

Handset Settings

: Tone Option










You can set the following sounds on or off.


Key Tone "KEY TONE": Key tone will sound when you press any key, and a confirmation tone and an error tone will be heard during operation.

Call Waiting Tone "CALL WAITING": Call waiting tone will sound when an incoming external call is received during an intercom call.

Range Warning Alarm "RANGE ALARM": Alarm will sound when you move out of range of a base unit.










Battery Low Alarm "BATTERY LOW": Alarm will sound when the batteries need to be charged.


1  Press MENU .	2   Search/Select "SETTING HS".	3   Search/Select "TONE OPT".	4   Search/Select "KEY TONE", "CALL WAITING", "RANGE ALARM" or "BATTERY LOW".
5   Search/Select "ON" or "OFF".			

- To exit the operation, press  any time.

: Display Option

Selecting the Standby Mode Display

1  Press MENU .	2   Search/Select "SETTING HS".	3   Search/Select "DISPLAY OPT".	4   Search/Select "STANDBY MODE".
5   Search/Select "CLOCK", *1 "OFF", "BS NO" (Base unit number) or "HS NO" (Handset number).			

- To exit the operation, press  any time.

 

*1 Time will only be displayed if the clock has been set. When new calls have been received, the display shows the number of new call.

Before programming, please follow steps 1 to 3.

- 1  Press **MENU**.
- 2  Search/Select "SETTING HS".
- 3  Search/Select "DISPLAY OPT".


Selecting the Talk Mode Display

Even if you select "PHONE NO", the other party's phone number will not appear on your display when you receive calls without subscribing to a Caller ID service.

- 4  Search/Select "TALK MODE".
- 5  Search/Select "TALK TIME"(Length of the call) or "PHONE NO"(Phone number).

Selecting the Display Language

- 4  Search/Select "LANGUAGE".
- 5  Search/Select desired language.*1

- To exit the operation, press  any time.

*1 You can select one of 10 languages.



 
 

If you set a language you cannot read, reset the handset to its initial settings.


Press **MENU** \blacktriangleright **DOWN** \blacktriangleright **RIGHT** \blacktriangleright **UP** \blacktriangleright **RIGHT** \blacktriangleright **4-digit Handset PIN** \blacktriangleright **UP** \blacktriangleright **OK**
All handset setting will be reset to their initial settings (p.26), however, the Phonebook data will be saved.

  : Call Option


Call BAR On/Off

This allows you to make an emergency and internal call.

- 1  Press **MENU**.
- 2  Search/Select "SETTING HS".
- 3  Search/Select "CALL OPT".
- 4  Search/Select "CALL BAR".
- 5 **4-digit Handset PIN***1
- 6  Search/Select "ON" or "OFF".*2

- To exit the operation, press  any time.

*1 The factory preset is 0000.

*2 If "ON" is selected,  is displayed.




Handset Settings

Before programming, please follow steps 1 to 3.





- 1  Press **MENU**.
- 2   Search/Select
"SETTING HS".
- 3   Search/Select
"CALL OPT".


Setting the Direct Call Number


After a direct call number has been set and on, you can dial the direct call number only by pressing **TALK**. Incoming calls are accepted.

- 4   Search/Select
"DIRECT NO".
- 5 **Phone Number**
Enter the direct call number. (max. 24 digits)
- 6  Press **OK** 3 times.

Setting the Direct Call On/Off

- 4   Search/Select
"SET DIRECT".
- 5   Search/Select
"ON" or "OFF".*1








- To exit the operation, press  any time.


*1 If "ON" is selected,  is displayed.

: Other Options

Changing Handset PIN

The factory preset is 0000. **Once you have programmed the handset PIN, you cannot confirm it. We recommend you write down the handset PIN. If you forget it, please consult our Panasonic Customer Care Helpline. U.K. 08700 100 076 R.O.I. 01289 8333**

- 1  Press **MENU**.
- 2   Search/Select
"SETTING HS".
- 3   Search/Select
"OTHER OPT".
- 4   Search/Select
"HSPIN CHANGE".
- 5 **Current 4-digit Handset PIN**
- 6 **New 4-digit Handset PIN**
- 7 **New 4-digit Handset PIN again to verify**

- To exit the operation, press  any time.

◆◆ Key Lock

You can lock the handset dialling buttons. Only incoming calls are accepted while the key lock is on. The key lock is cancelled if the handset is turned off.

When the key lock is on, emergency calls cannot be made until key lock is cancelled.

Key Lock On



Press **OK** for more than 2 seconds.

Key Lock Off



Press **OK** for more than 2 seconds.

-  is displayed and all dialling buttons are locked.

◆◆ Recall Feature

RECALL is used to access special telephone services. Contact your Network provider for details. If your unit is connected to a PBX, pressing **RECALL** allows you to access some features of your host PBX such as transferring an extension call.

◆◆ Dialling Pause (for PBX line/long distance service users)

A dialling pause is used when a pause in the dialling of the phone number is necessary using a PBX or accessing a long distance service.

For example, when 9 (line access number) is dialled followed by a pause to access an outside line through a PBX:

1 

2



Press **PAUSE**. *1

3 Phone Number

4



Press **TALK**.

- Entering a pause prevents misdialling when you redial or dial a stored number.
- Pressing **PAUSE** once creates one pause. To extend the pause requirement time, press **PAUSE** accordingly.

*1  is displayed on the LCD.

Base Unit Settings

Before programming, please follow steps 1 to 2.

- 1  Press **MENU**.
- 2  Search/Select "SETTING BS".





Changing Base Unit PIN

The factory preset is 0000. **Once you have programmed the base unit PIN, you cannot confirm it. We recommend you write down the base unit PIN. If you forget it, please consult our Panasonic Customer Care Helpline. U.K. 08700 100 076 R.O.I. 01289 8333**




- 3  4 Current 4-digit Base Unit PIN 5 New 4-digit Base Unit PIN
- 6 New 4-digit Base Unit PIN again to verify

Call Restriction

You can restrict selected handset(s) from dialling selected phone numbers. You can assign up to 10 call restriction numbers (up to 8 digits). If you dial a restricted number, the call does not connect and restricted number flashes.

- 3  4 4-digit Base Unit PIN*1
- 5 Handset Number
Select desired handset.*2
- 6  Press **RIGHT**.
- 7 Phone Number
Enter phone number to be restricted.
(up to 8 digits)
- 8  Press **RIGHT**.
- 9  Press **OFF**.
OR
To continue entering call restriction numbers, repeat the steps 7 to 8.
(up to 10 numbers)

Cancelling Call Restricted Handset(s)

- 3  4 4-digit Base Unit PIN*1
- 5 Handset Number
Select desired handset.*3
- 6  Press **RIGHT**.
- 7  Press **OFF**.

- To exit the operation, press  any time.

*1 The factory preset is 0000.






*2 The selected handset number flashes.

*3 The selected handset(s) will stop flashing.

Before programming, please follow steps 1 to 2.






- 1  Press **MENU**.
- 2  Search/Select "SETTING BS".

Cancelling Call Restricted Number

- 3  4 4-digit Base Unit PIN*1
- 5  Press **RIGHT** repeatedly until desired call restriction number is displayed.
- 6  Press **CLEAR**.
- 7  Press **RIGHT**.
- 8 <to continue> Repeat the steps 5 to 7. OR <to finish>  Press **OFF**.






Time Break/Earth Recall


An earth relay can be installed as an option depending on your PBX requirements. Please consult our Panasonic Customer Care Helpline for installation. On installation, you can then select the time break recall or earth mode to suit your PBX or Network provider.

- 3  4 4-digit Base Unit PIN*1
- 5  6  Time Break Recall *2 OR  Earth Recall
- 7  Press **OK**.

Pause Timing

You can set the pause timing to 3 or 5 seconds, depending on your PBX requirements.

- 3  4 4-digit Base Unit PIN*1
- 5  6  3 Seconds OR  5 Seconds
- 7  Press **OK**.

- To exit the operation, press  any time.

*1 The factory preset is 0000.


*2 "1-2" stands for 80 msec.

Initial Settings

: Reset Handset


You can reset all of the handset settings to their initial settings.

1




Press **MENU**.

2



Search/Select
"SETTING HS".

3




Search/Select
"RESET HS".


4

4-digit Handset PIN*1

5



Search/Select
"YES" or "NO".

- To exit the operation, press  any time.






*1 The factory preset is 0000.


Handset Initial Settings

Function	Initial Setting
Time Alarm Mode	OFF
Alarm Time	Clear
Handset Ringer Volume	6
Handset External Ringer Pattern	1
Handset Internal Ringer Pattern	1
Handset Paging Tone Pattern	1
Handset Alarm Tone Pattern	1
Key Tone	ON
Call Waiting Tone	ON
Range Warning Alarm	OFF
Battery Low Alarm	ON
Standby Mode Display	Clock
Talk Mode Display	Length of the Call
Display Language	English
Call BAR	OFF
Direct Call Mode	OFF
Direct Call Number	Clear
4-Digit Handset PIN	0000
Auto Talk	OFF
Base Unit Access	Automatic Base Unit Access
Redial Memory	All Clear
Handset Receiver Volume	Medium

◆◆ Reset Base Unit Settings

If the base unit is reset, the Caller ID list will clear.

1 	2 	 "INPUT CODE"	3 
Press MENU .	Search/Select "SETTING BS".		Press 0 .
4 4-digit Base Unit PIN*1	5 		
	Press OK .		

- To exit the operation, press  any time.

*1 The factory preset is 0000.

Base Unit Initial Settings


Function	Initial Setting
Ringer Mode	All Handsets
Number of Rings	3
Earth/Time Break Recall	Time Break Recall
Pause Timing	3 seconds
Call Restricted Handsets	All Clear
Call Restriction Numbers	All Clear
4-Digit Base Unit PIN	0000

Multi-unit User Operation












◆◆ **REGISTRATION**: Handset Registration to a Base Unit


Handset Registration

The handset supplied with the base unit is already registered. If an optional handset is purchased, it must be registered. Additional **KX-A142E** handsets are available to purchase separately. Up to 6 handsets can be registered to a single base unit. Using additional handsets allows you to have an intercom call while simultaneously conducting a call to an outside line.

Handset must be registered within 1 minute after pressing **PAGE** button. If over 1 minute, press  then start over again.

Charge the optional handset batteries for 7 hours before initial use.

- | | | | |
|--|--|--|--|
| 1 
Press MENU . | 2  
Search/Select
"SETTING HS". | 3  
Search/Select
"REGISTRATION". | ➔ "REGISTER HS" |
| 4 
Press RIGHT . | 5 Press and hold  on the Base Unit
(for about 10 seconds) until the green indicator flashes.
• If all registered handsets start ringing (Paging),
press  to stop paging then start over again. | | |
| 6  
Search/Select desired
base unit number
available to register
the handset. | 7 4-digit Base
Unit PIN after
"BS PIN" is
displayed.*1 | 8 
Press OK . | ➔ When a handset is
registered successfully,
a confirmation tone
sounds and "▼"
icon lights. |













• To exit the operation, press  any time.

*1 The factory preset is 0000.

KX-A142E Handset: You can see the illustrations for answering system feature on additional KX-A142E handset body, but KX-TCD410E does not have an answering system feature. Therefore, the answering system does not work even if KX-A142E handset has been registered to KX-TCD410E.






Cancelling a Base Unit

You can cancel any base unit that your handset is registered to.

1  Press MENU .	2   Search/Select "SETTING HS".	3   Search/Select "REGISTRATION".
4   Search/Select "CANCEL BS".	5 4-digit Handset PIN*1	
7  Press RIGHT .	6   Search/Select desired base unit number to cancel.*2	
8   Search/Select "YES" or "NO".		

Cancelling a Handset

Each handset can cancel itself or another handset.

1  Press MENU .	2   Search/Select "SETTING BS".	➔ "INPUT CODE"	3 
4 4-digit Base Unit PIN*1	5 Handset Number Select desired handset.*3	6  ➔ Please wait until "SETTING BS" is displayed.	

- To exit the operation, press  any time.





*1 The factory preset is 0000.

*2 The selected base unit number flashes.



*3 The selected handset number flashes.

Multi-unit User Operation


Before programming, please follow steps 1 to 4.

- 1  Press **MENU**. 2  Search/Select "SETTING BS". 3  "INPUT CODE" 4  4-digit Base Unit PIN*1

Ringer Mode Selection; Setting the All Handsets Mode


- 5  "All handsets" mode. 6  Press **OK**.


Setting the Selected Handsets Mode

- 5  "Selected handsets" mode. 6 Handset Numbers*2 Press desired handset numbers. 7  Press **OK**.

Setting the Selected then All Handsets Mode

The specific handset(s) will ring for a selected number of rings.
If not answered, all handsets will ring.

- 5  "Selected then all handsets" mode. 6 Handset Numbers*2 Press desired handset numbers. 7  Press **RIGHT**.
- 8 Number of Rings*3 Select how many times it rings. (up to 6 rings) 9  Press **OK**.

- To exit the operation, press  any time.
- The factory preset is in shade.

*1 The factory preset is 0000.





*2 The selected handset number flashes.


*3 Press dialling button 1 through 6 to enter the number of rings.

◆◆ SELECT BS : Base Unit Selection


When Automatic Base Unit Access is selected, if you move outside of the radio range of the current base unit the handset automatically searches for other registered bases.

When a specified base unit is selected, the handset will access that base unit only. Calls (both incoming and outgoing) can be conducted only via the selected base unit, even if the radio cells overlap with neighbouring base units.

1 	2 	3 	4 
Press MENU .	Search/Select "SETTING HS".	Search/Select "SELECT BS".	Search/Select "AUTO" or specific base unit number.

- To exit the operation, press  any time.

Operating Additional Base Units: You can register and operate your handset with up to 4 base units. Each base unit forms 1 radio cell. If the individual bases are linked to the same telephone line then you can extend the operating range of the system by positioning the bases so that the two radio cells overlap. If the handset is set to AUTO base selection, then in standby mode the handset will automatically swap to the second base if the range on the first base is exceeded. It is not possible to transfer calls between bases (only between handsets linked to the same base unit).

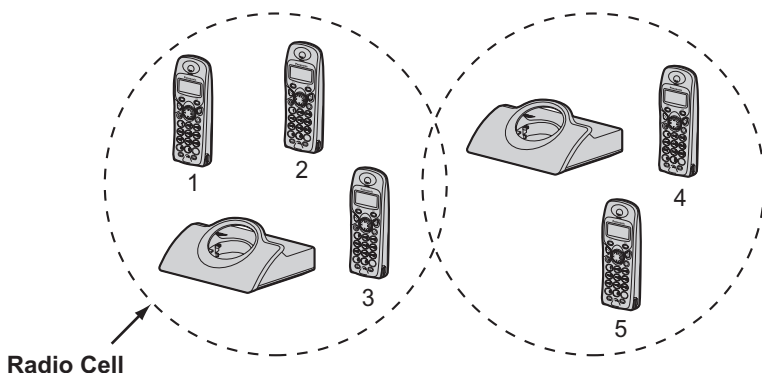


Eg.
Additional
handsets
(KX-A142E)
registered with
2 base units.


Note: Calls are disconnected when the handset moves from one radio cell to another.

Intercom

Intercom between Handsets


You can use your handsets as a 2-way intercom.


For example, when Handset 1 calls Handset 2. To hang up, press .

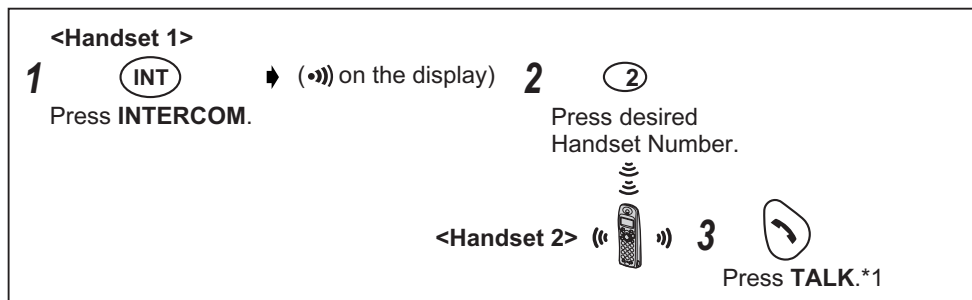


- Intercom calls can be conducted within the radio cell of the current base unit, but not with units in neighbouring radio areas.



Transferring a Call to Another Handset/Conference Call

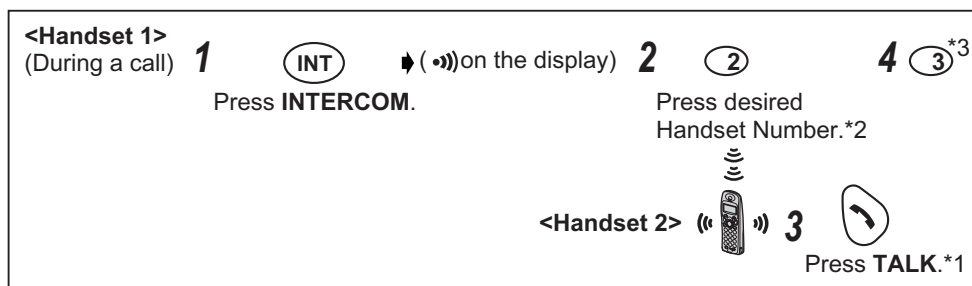Intercom can be used during a call to transfer an external call between handsets that are registered to the same base unit. For example, when handset 1 transfers a call to Handset 2. To hang up, press .



^{*1} You can also press any dialling button, **INTERCOM**, **#** or *****.

^{*2} If you press  after pressing desired handset number, a call can be transferred to another handset without speaking to another handset.
If the transferred call is not answered within 30 seconds, Handset 1 will ring again.

^{*3} When Handset 2 answers a call transferred, press  to complete a call transfer or press dialling button  to establish the conference call.

Before Requesting Help



If you experience any problems with the normal use of your apparatus, you should unplug it from the telephone outlet and connect a known working telephone in its place. If the known working telephone still has problems, then please contact the customer service department of your Network provider.

If it operates correctly, then the problem is likely to be a fault in your apparatus. In this case, contact your supplier for advice. Your Network provider may charge you if they attend a service call that is not due to apparatus supplied by them.

Turn the power OFF then ON (Handset) / Disconnect then connect the AC adaptor (Base unit).

Problem	Possible cause	Solution
NO LCD display in handset.	<ul style="list-style-type: none">• Handset not turned on.	<ul style="list-style-type: none">• Turn on power (p.9).
Handset will not turn on.	<ul style="list-style-type: none">• Batteries not inserted.• Batteries not charged.	<ul style="list-style-type: none">• Insert the 2 rechargeable batteries supplied (p.4).• Place handset in base and connect AC adaptor to base and AC outlet (full charge period 7 hrs).
Batteries charge icon not counting up.	<ul style="list-style-type: none">• Dirty charge contact.• Base not powered up.	<ul style="list-style-type: none">• Clean charge / battery contact and retry charge.• Connect AC adaptor to base unit and AC outlet.
📶 icon flashes.	<ul style="list-style-type: none">• Handset not registered to base.• Handset out of range of base.• No power into base unit.	<ul style="list-style-type: none">• Register handset to base.• Move handset closer to base.• Connect AC adaptor to base unit and AC outlet.
Handset busy tone heard when 📞 is pressed.	<ul style="list-style-type: none">• Handset out of range of base.• Another handset in use.	<ul style="list-style-type: none">• Move handset closer to base.• Wait for the other user to complete call.
No dial tone.	<ul style="list-style-type: none">• Telephone line not connected.	<ul style="list-style-type: none">• Insert telephone cord to network.• Turn power OFF then ON.
Cannot dial out.	<ul style="list-style-type: none">• Call BAR set.• Particular dialled number is restricted.• Key lock mode ON.	<ul style="list-style-type: none">• Turn feature off.• Remove number from call restricted list.• Turn key lock OFF.
Handset will not ring.	<ul style="list-style-type: none">• Ringer switched off.	<ul style="list-style-type: none">• Set ringer to one of 6 volume levels. (see "Handset Settings".)

  Before Requesting Help

Problem	Possible cause	Solution
Last number redial does not work.	<ul style="list-style-type: none"> • Number exceeded 24 digits. 	<ul style="list-style-type: none"> • Redial manually.
No Caller ID number displayed.	<ul style="list-style-type: none"> • Service not supplied. • Caller has withheld info. 	<ul style="list-style-type: none"> • Caller ID service must be arranged with Network provider.
 icon flashes	<ul style="list-style-type: none"> • Battery low. 	<ul style="list-style-type: none"> • Recharge batteries.
 icon is disappeared	<ul style="list-style-type: none"> • Wrong battery type selected. 	<ul style="list-style-type: none"> • Set the correct battery type.
Cannot register handset to base.	<ul style="list-style-type: none"> • Max. number of bases already registered to handset. • Max. number of handsets already registered to base unit. • Wrong PIN number entered (Default 0000). • Electrical noise in local area. 	<ul style="list-style-type: none"> • Delete unused base registrations from handset. • Delete unused handset registrations from base. • If PIN number is lost, contact the Panasonic Customer Care Helpline. • Move base/handset away from sources of electrical noise (e.g TV, radio).

Specifications

Standard:	DECT=(<u>D</u> igital <u>E</u> nhanced <u>C</u> ordless <u>T</u> elecommunications) GAP=(<u>G</u> eneric <u>A</u> ccess <u>P</u> rofile)
Number of channels:	120 Duplex Channels
Frequency range:	1.88 GHz to 1.9 GHz
Duplex procedure:	TDMA (Time Division Multiple Access)
Channel spacing:	1728 kHz
Bit rate:	1152 kbit/s
Modulation:	GFSK
RF Transmission Power:	approx. 250 mW
Voice coding:	ADPCM 32 kbit/s
Power source:	AC Adaptor 220 - 240 V, 50 Hz
Power consumption, base unit:	5 VA
Operating conditions:	5 - 40 °C, 20 - 80 % relative air humidity (dry)
Dimensions, Base Unit:	About (58 mm x 128 mm x 105 mm) x 170 g
Dimensions, Handset:	About (143 mm x 48 mm x 32 mm) x 120 g

- Specifications are subject to change.
- The illustrations used in this manual may differ slightly from the original device.

Connections: The telephone will not work during a power failure. We therefore recommend you use a standard telephone and T Adaptor to connect this Digital Cordless Phone to the line. Your Panasonic Sales Shop can offer you more information about connection possibilities.

Index

AC Adaptor	2, 4	Handset	
Accessories	2	Display	7
Answering Calls	13	Initial Settings	25
Auto Talk	13	Locator	13
Base Unit		Paging	13
Initial Settings	26	PIN	22
PIN	30	Registration	27
Reset	26	Reset	25
Selection	31	Ringer	19
Battery		Intercom	32
Caution	3	Key	
Charge	5	Lock	23
Installation	4	Tone	20
Life	5	Making Calls	
Battery Low Alarm	20	Redialling	10
Call Restriction		with the Phonebook	15
Cancelling Call Restricted		Phonebook	
Handset(s)	30	Hot Key	17
Cancelling Call Restricted Number ..	24	Storing	14
Call Waiting	11	Power On/Off	9
Caller ID List		Range Warning Alarm	20
Calling Back	12	Recall	23
Clearing	12	Receiver Volume	13
Editing	12	Ringer Pattern	19
Storing	16	Ringer Volume	19
Calls		Setting up	4
Answering	9	Specifications	35
Making	9, 10	Time Alarm	18
Redialling	10	Time Break/Earth Recall	24
Terminating	9	Tone Option	20
Cancelling a Base Unit	28	Wall Mounting	8
Cancelling a Handset	28		
Clock/Date	9		
Conference Call	32		
Dialling Pause	23		
Direct Call Number	22		
Display			
Standby Mode	20		
Talk Mode	21		
Guarantee	37		

CONDITIONS OF GUARANTEE

This guarantee is in addition to and does not in any way affect any statutory or other rights of consumer purchasers. If within the applicable guarantee period, the appliance proves to be defective by reason of faulty design, workmanship or materials, we undertake subject to the following conditions to have the defective appliance (or any part or parts thereof) repaired or replaced free of charge.

1. The appliance shall have been purchased and used solely within either the UK or ROI and in accordance with standard operating instructions and the technical and/or Safety Standards required in the UK.
2. The appliance should be returned together with this guarantee and proof of date of purchase promptly on being found defective at the purchaser's risk and expense to the authorised dealer from whom the appliance was purchased or to the nearest authorised dealer. All enquires must be through such dealers.
3. This guarantee shall not apply to damage caused through fire, accident, lightning, misuse, wear and tear, neglect, incorrect adjustment or repair, to damage caused through installation, adaption, modification or use in an improper manner or inconsistent with the technical and/or safety standards required in the country where this appliance is used, or to damage occurred during transit to or from the purchaser.
4. If at any time during the guarantee period any part or parts of the appliance are replaced with a part or parts not supplied or approved by us or of an objective quality safe and suitable for the appliance, or the appliance has been dismantled or repaired by any person not authorised by us, we shall have the right to terminate this guarantee in whole or in part immediately without further notice.
5. The purchaser's sole and exclusive remedy under this guarantee against us is for the repair or replacement of the appliance or any defective part or parts and no other remedy, including, but not limited to, incidental or consequential damage or loss of whatsoever nature shall be available to the purchaser.
6. This guarantee shall not apply to batteries and any other items of limited natural life.
7. Our decision on all matters relating to complaints shall be final. Any appliance or defective part which has been replaced shall become our property.
8. The guarantee period applicable to this product shall be 12 months.

Please keep these Operating Instructions with your receipt.

Panasonic Business Systems U.K.

Receipt No.

Date of Purchase

Model No. KX-TCD410E

Serial No.

Hereby, Panasonic Communications Co., Ltd., declares that this Dect Cordless Telephone is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

A copy of the manufacturer's declaration of conformity to the essential requirements of the R&TTE Directive is available at the following web address:

<http://doc.panasonic-tc.de>

For your future reference

Serial No.

Date of purchase

(found on the bottom of the unit)

Name and address of dealer

Attach or keep original receipt to assist with any repair under warranty.

Customer Care Helpline Tel. No.: U.K. 08700 100 076

R.O.I. 01289 8333

CE0436

1999/5/EC

This equipment is designed for use on the United Kingdom only.

In the event of problem, you should contact your equipment supplier in the first instance.

Technical specifications are subject to change.

Sales Department:

Panasonic Business Systems U.K.

Panasonic House, Willoughby Road, Bracknell, Berkshire, RG12 8FP

Panasonic Communications Co., Ltd.

1-62, 4-chome, Minoshima, Hakata-ku, Fukuoka 812-8531, Japan